 
 




Gebrauchsanweisung
Operating Instructions
Mode d'emploi
Gebruiksaanwijzing
Istruzioni per l'uso
Instrucciones para el uso
Instruções de utilização
Οδηγίες χρήσης

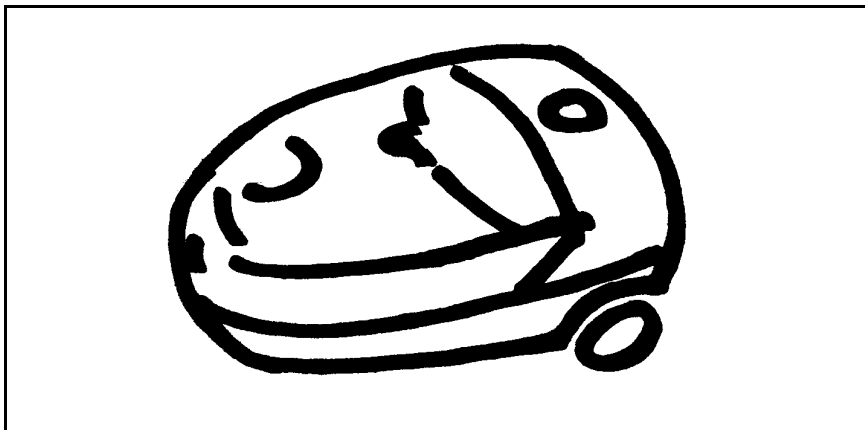

Bodenstaubsauger
Vacuum Floor Cleaner
Aspirateur-traîneau
Bodemstofzuiger
Aspirapolvere
Aspirador de polvo para suelos
Aspirador de pó para chão
Ηλεκτρικές σκούπες δαπέδου
Diamant ...

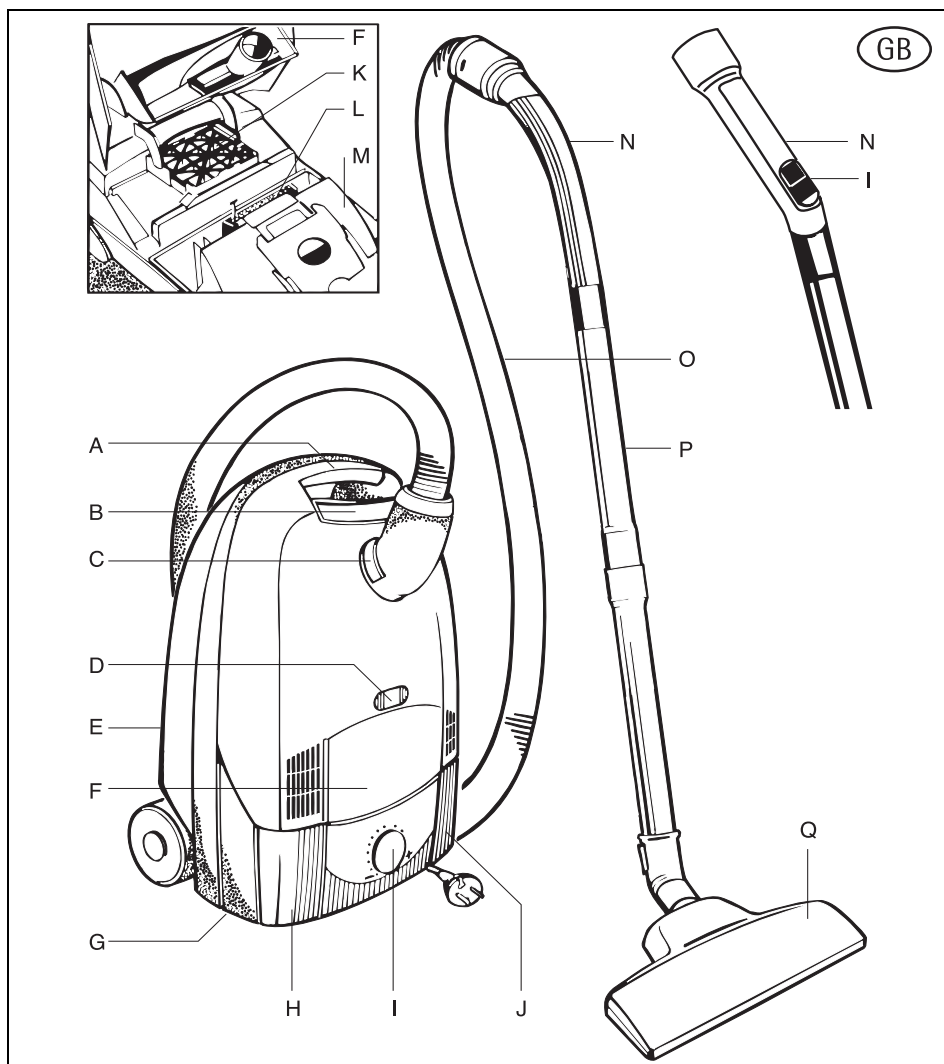

- A = Carrying handle
- B = Button to open the paper filter compartment
- C = Hose release button
- D = Filter replacement indicator
- E = Tool rail
- F = Accessories compartment*
- G = Parking rail
- H = On/Off button
- I = Power adjuster*

- J = Cable retraction button
- K = Microfilter
- L = HEPA filter
- M = Paper filter
- N = Handle*
- O = Suction hose
- P = Suction tube
- Q = Nozzle

*depending on model

Contents

Appliance description.....	8
Before using for the first time.....	9
Protecting the environment.....	9
Safety instructions for the user.....	9
Preparing the vacuum cleaner for use....	10
Using the nozzles.....	10
Switching on.....	11
Maintenance and cleaning.....	12
Paper filter.....	13
What do I do, if.....	13

Before using for the first time

Please read the following information carefully. It provides important information on the safety, use and maintenance of the appliance. Keep the operating instructions in a safe place and pass them on to any subsequent owners.

Protecting the environment

Do not simply throw away packaging material and old appliances.

Equipment packaging:

- The cardboard packaging can be deposited at a waste paper recycling point.
- Deposit the recyclable polyethylene (PE) bag at a PE recycling point.

Recycling the appliance at the end of its life:

- The plastic components all carry a material identification marking so that, like the other materials, they can be recycled at the end of the life of the appliance.

Please ask your local authority about your local recycling centre.

Safety instructions

 
CE This appliance complies with the following EC directives: – 73/23/EC dated 21. 02. 1973 – Low Voltage Directive – 89/336/EEC dated 03. 05. 1989 (including Amending Directive 92/31/EEC) – EMC Directive.

- Only connect the appliance to – 220/230 Volt – alternating current.
- The mains circuit for the socket used must be protected with a fuse with a rating of at least 10 A.
- Never remove the mains plug from the socket by pulling on the cable.

- Do not use the appliance if:
 - the cable is damaged.
 - the housing shows visible signs of damage.
- Avoid running over the mains lead with the appliance or the vacuum brush. The insulation could be damaged.
- **The cover cannot be closed unless a paper filter has been inserted. Please do not use force!**
- Always ensure that a paper filter as well as a MICROFILTER and a HEPA filter are inserted.
- Toner dust from laser printers and copiers must not be vacuumed using normal household vacuum cleaners.
- This is a domestic vacuum cleaner and should only be used to vacuum dry dust. People and animals must not be vacuumed using the appliance.
Keep children away from electrical appliances.
- The manufacturer is not liable for any damage caused by incorrect use or operation.
- Leave wet shampooed carpets to dry completely. Otherwise the vacuum cleaner will be damaged. Such action might also reduce protection against electric shock.
- Do not vacuum matches, glowing ashes or cigarette ends using the appliance. Avoid picking up hard, pointed objects as these may damage the appliance or the paper filter.
- Do not expose the appliance to the effects of the weather, humidity or sources of heat.
- Should the mains lead be defective, the complete cable roller must be replaced by PROGRESS customer service or an authorised repair centre.
- Repairs to electrical appliances may only be carried out by qualified specialists. Improperly effected repairs may result in significant risk to the user.
- For this reason, if there is a malfunction in your appliance please contact your specialist dealer or PROGRESS customer service directly.


Preparing the vacuum cleaner for use

The accessories can be connected by pushing and twisting, and can be disconnected by pulling them apart and twisting.

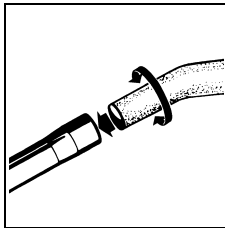


Connecting the suction hose and suction tube.

 Join the suction hose handle firmly to the suction tube.

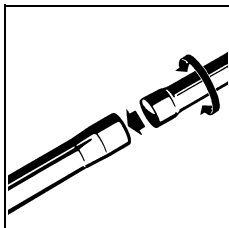

Connecting the suction tubes

 
Join the two tubes.

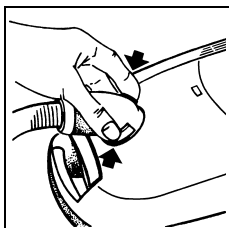

Attaching the suction hose

Insert the suction hose connector in the suction inlet. It locks in place and can be rotated all the way around.

 
Press the release button and pull out the connector in order to remove the suction hose.

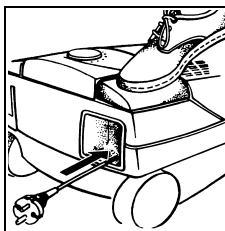

Mains connection/Cable rewind


The mains cable is in the cable compartment. Pull out the cable and insert the plug into the mains socket. Remove plug from the mains socket. Press the foot button; the cable rewinds automatically when vacuuming has been completed.

 Using the nozzles

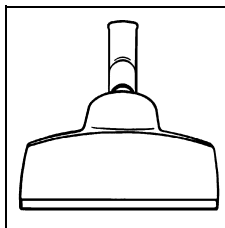


Using the floor nozzle*

 For the daily care of carpets and hard floors. Without being changed over manually, the floor nozzle is entirely suited for daily vacuuming of carpets and hard floor surfaces such as parquet, tiles, linoleum, etc.

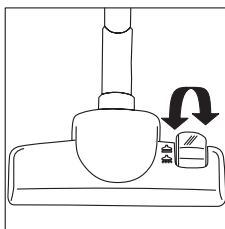

Using the floor nozzle*

 
For the daily care of carpets and hard floors. The floor nozzle may be changed over manually. The brushes can be extended for smooth floors and retracted for carpets.

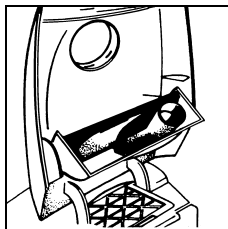

Crevice and upholstery nozzle stored in the appliance


For specific cleaning requirements, two additional parts are included with the vacuum cleaner in an integrated accessories compartment*. Open the compartment by pressing gently as shown in the figure.

 The nozzles may be attached to the suction tube or the handle on the suction hose, depending on requirements.

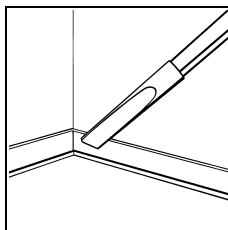

Crevice nozzle

 For vacuuming crevices, gaps and corners.

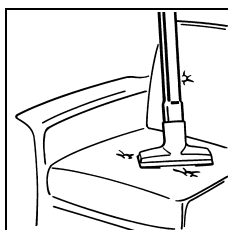

Upholstery nozzle

For vacuum cleaning all upholstered furniture, mattresses, etc.

The thread lifting strips on the nozzle even pick up thread and lint.

 
Switching on

Switching on and off




You can switch the appliance on and off by pressing the On/Off button.

Power adjustment:

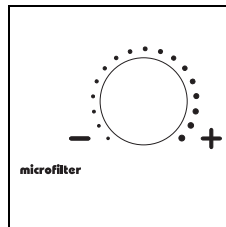

Power adjustment – Rotary control*

 The suction power can be varied to suit individual vacuuming requirements using the electronic power adjuster.

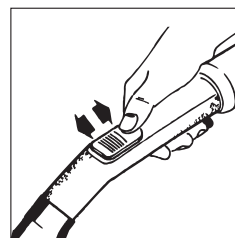


Power adjuster – Secondary air regulator*

Using the regulator on the handle, you can reduce the suction power, e.g. when vacuuming light items (net curtains, rugs). The wider you open the regulator, the lower the suction power at the nozzle becomes

*depending on model

Maintenance and cleaning

 
Prior to maintenance or cleaning, ensure that the appliance is switched off and that the mains plug has been removed from the socket:

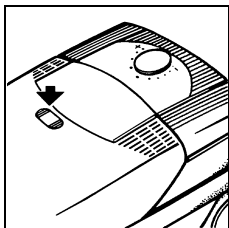


Changing the paper filter

The paper filter must be replaced if the window on the filter replacement indicator is completely red when the appliance is operating at maximum power and the nozzle is raised from the floor.

 The paper filter should be replaced even if it does not appear to be full because fine dust can block the pores in the surface of the filter.

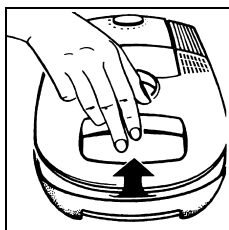

 The cover can be opened by pressing the button and folding back until it locks.

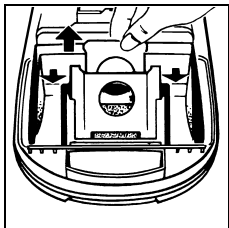


Hygienic filter change: When removing the full filter bag, pull the closing tab to automatically close the opening. There will be slight resistance when the tab is pulled.

Bags full of normal household dust may be disposed of with household waste.


Insert the new paper filter as far as it will go in the guide rails; only then can the lid be closed. The cover cannot be closed unless a paper filter has been inserted. Please do not use force!

Changing the microfilter

 We recommend **replacing the microfilter** at each fifth paper filter replacement, and at the latest when there is a clean dust bag and the dust level indicator is completely red with the nozzle raised.

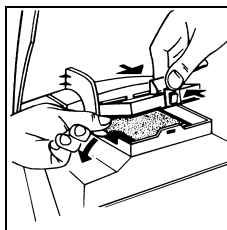

 Open the lid and fold up. Remove the used microfilter by means of the **clean hygienic tabs** (figure) and dispose of it with the household waste. Insert the new microfilter and close the cassette.

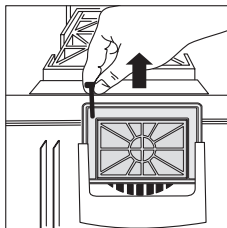

HEPA filter

A highly effective special filter belonging to Class "S". This filter offers relief and assistance to allergy sufferers. The HEPA filter should be replaced after one year.

HEPA filter – further supplies available from Progress customer service.

 
Cleaning

As required, wipe the housing and the paper filter compartment with a damp cloth. Do not use any scourers or any solvents. Occasionally vacuum the floor nozzle and brush-heads with the crevice nozzle.


Paper filter

Progress P58

Carrying and Storage

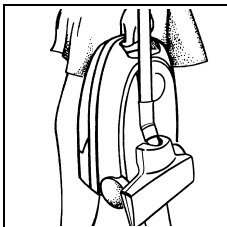

 To make the appliance easier to store and carry, slide the floor nozzle into the tool rail.

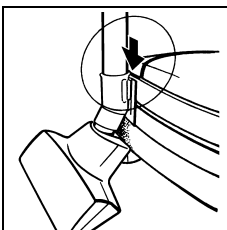

Parking System

For storing the suction pipe and nozzle during short pauses in vacuuming. The bracket on the nozzle is slid into the parking rail on the appliance.

What do I do, if ...

... it is difficult to push the nozzle

Reduce the power setting on the appliance. This will not reduce cleaning efficiency.

... the motor thermal cut-out is activated

If the motor is overloaded, e.g. due to a full filter bag or blocked accessory, the thermal cut-out shuts down the motor. In this case, switch off the appliance, unplug from the mains, and leave the motor to cool down.

Check paper filter bag, suction tube and suction hose; remove any blockage.

 
The appliance can be switched on again after approximately 30 minutes.

... the fuse has blown

The fuse may blow if you use other electrical appliances with high power consumption on the same electric circuit at the same time as the vacuum cleaner is in use.

This can be avoided if you set the electronic power adjuster to the lowest power level and then select a higher level after switching the appliance on.

Your vacuum cleaner can be fitted with a gentle start-up control which reduces the starting current to the motor and therefore prevents the electric circuit cut-out being triggered under normal conditions. It is possible that there will be a delay of about 4 seconds in the appliance starting up on the lowest power level.

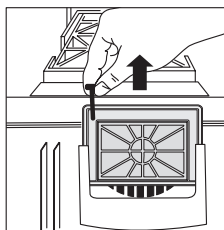

... the paper filter is damaged at some stage and the HEPA filter is dirtied

Remove the HEPA filter, clean (tap out) and replace.

Insert new paper filter.

PROGRESS Kundenservice

In Deutschland

Für diesen PROGRESS Staubsauger bieten wir Ihnen kompetenten Kundendienst über unsere Kleingeräte-Zentralwerkstätten. Sollte dieses Gerät wider Erwarten nicht funktionieren, senden Sie es bitte an die für Sie zuständige Adresse:

Beginnt die Postleitzahl Ihres Wohnortes mit 2 - 3 - 4 - 5

Kleingeräte-Zentralwerkstatt

Firma Elektro Stefan Irsen

Sachtlebenstraße 1, 41541 Dormagen

Beginnt die Postleitzahl Ihres Wohnortes mit 0 - 1 - 6 - 7 - 8 - 9

Kleingeräte-Zentralwerkstatt

Firma Trepesch GmbH

Steinstraße 500, 90419 Nürnberg

In Deutschland stehen wir Ihnen für Fragen, Anregungen oder bei Problemen rund um unsere Raumpflegegeräte montags bis freitags von 8 bis 18 Uhr zur Verfügung.

PROGRESS Serviceline unter 01805-30 60 80*

Fax: 0911/ 3 23-49 19 30

E-Mail: info.service@progress-staubsauger.de

*(Deutsche Telekom 0,12 Euro/min.)

Staubbeutel, Filter und Zubehör

Zum Erhalt der vollen Leistungsfähigkeit Ihres PROGRESS Staubsaugers empfehlen wir die Verwendung von PROGRESS Original-Staubbeuteln P58. Diese können Sie über unser Service Center unter 01801-20 30 90 bestellen. Weitere Informationen erhalten Sie im Internet unter www.progress-staubsauger.de

Garantiebedingungen

Der Endabnehmer dieses Geräts (Verbraucher) hat bei einem Kauf dieses Geräts von einem Unternehmer (Händler) in Deutschland im Rahmen der Vorschriften über den Verbrauchsgüterkauf gesetzliche Rechte, die durch diese Garantie nicht eingeschränkt werden. Diese Garantie räumt dem Verbraucher also zusätzliche Rechte ein. Dies vorausgeschickt, leisten wir, AEG Hausgeräte GmbH, gegenüber dem Verbraucher **Garantie für dieses Gerät für den Zeitraum von 24 Monaten ab Übergabe** zu den folgenden Bedingungen:

1. Mit dieser Garantie haften wir dafür, dass dieses neu hergestellte Gerät im Zeitpunkt der Übergabe vom Händler an den Verbraucher die in unserer Produktbeschreibung für dieses Gerät aufgeführten Eigenschaften aufweist. Ein Mangel liegt nur dann vor, wenn der Wert oder die Gebrauchstauglichkeit dieses Geräts erheblich gemindert ist. Zeigt sich der Mangel nach Ablauf von sechs (6) Monaten ab dem Übergabezeitpunkt, so hat der Verbraucher nachzuweisen, dass das Gerät bereits im Übergabezeitpunkt mangelhaft war.

Nicht unter diese Garantie fallen Schäden oder Mängel aus nicht vorschriftsmäßiger Handhabung sowie Nichtbeachtung der Gebrauchsanweisungen.

2. Dieses Gerät fällt nur dann unter diese Garantie, wenn es in einem der Mitgliedsstaaten der Europäischen Union gekauft wurde, es bei Auftreten des Mangels in Deutschland betrieben wird und Garantieleistungen auch in Deutschland erbracht werden können. Mängel müssen uns innerhalb von zwei (2) Monaten nach dessen Kenntnis angezeigt werden.
3. Mängel dieses Geräts werden wir innerhalb angemessener Frist nach Mitteilung des Mangels unentgeltlich beseitigen; die zu diesem Zweck erforderlichen Aufwendungen, insbesondere Arbeits- und Materialkosten werden von uns getragen. Über diese Nachbesserung hinausgehende Ansprüche werden durch diese Garantie dem Verbraucher nicht eingeräumt.
4. Im Garantiefall ist das Gerät vom Verbraucher an die für seinen Wohnort zuständige AEG-Zentralwerkstatt zu versenden, wobei das Gerät gut zu

Other Countries

Further after sales service

In these countries our sales organisations own warranty conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après vente
Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

France, 60307 Senlis, 03-44 62 24 24

Italy, 33080 Porcia (PN), 0434 39 41

Great Britain, 08705 929 929

Ireland, 01 45 65 222

Belgium, 1502 Lembeek, 02/363 05 41

Netherlands, Alphen aan den Rijn, 0172-468 300

Austria, 4010 Linz, 0732/770101-30

Hellas, Thessaloniki 0310 561 970/Athens, 010 985 48 76

Poland, 02-034 Warszawa, 022-874-33-33

verpacken ist und die vollständige Anschrift des Verbrauchers zusammen mit einer kurzen Fehlerbeschreibung in das Paket zu legen ist. Zum Nachweis des Garantie-Anspruchs ist der Sendung der Original-Kaufbeleg (Kassenzettel, Rechnung) beizufügen.

5. Garantieleistungen bewirken weder eine Verlängerung noch einen Neubeginn der Garantiezeit für dieses Gerät; ausgewechselte Teile gehen in unser Eigentum über.

6. Mängelansprüche aus dieser Garantie verjähren in zwei (2) Jahren ab dem Zeitpunkt der Übergabe des Geräts vom Händler an den Verbraucher, der durch den Original-Kaufbeleg (Kassenzettel, Rechnung) zu belegen ist; wenn dieses Gerät gewerblich genutzt wird, beträgt die Verjährungsfrist sechs (6) Monate.